 


ALPA

BEVELBOX

 


01




Set the gauge flat on a reference surface such as a table saw, miter saw, or jointer table. On a band saw, the blade will be the reference surface

02




Turn ON and press the ZERO to set the gauge to 0.0 degrees which calibrates the reference surface

 03




Attach to the saw blade or jointer fence using the imbedded magnets. The gauge should always be kept perpendicular to the table for all measurements.

 04




A properly adjusted saw blade, jointer fence or band saw table will display 90.0 degrees. If reading is off, re-adjust your machine following the manufacturers instructions

 05



Now you can press ZERO to set the gauge to 0.0 degrees and measure the angle of your saw blade, jointer fence or band saw table.

 06



Replace the battery by rotating the cover on the back of the gauge counter clockwise.